


BOX MEASUREMENTS FOR ORDERING LENSES AT OPTICARE


CORRECT HEIGHTS FOR BIFOCALS AND PROGRESSIVES

Due to an equipment upgrade which will result in a higher standard of lens fitting, we need to make sure lenses are ordered with the correct measurements. This applies to any lenses requiring a heights measurement including Bifocals, Progressives and Free-Form Single Vision lenses. You may have been ordering lenses measuring heights from the patient's Pupil Centre to the bottom of the frame. We now require heights measured to the bottom of the Frame Box; the lowest point of the frame. See the examples below. If you have any questions, please contact us.

BOXING SYSTEM

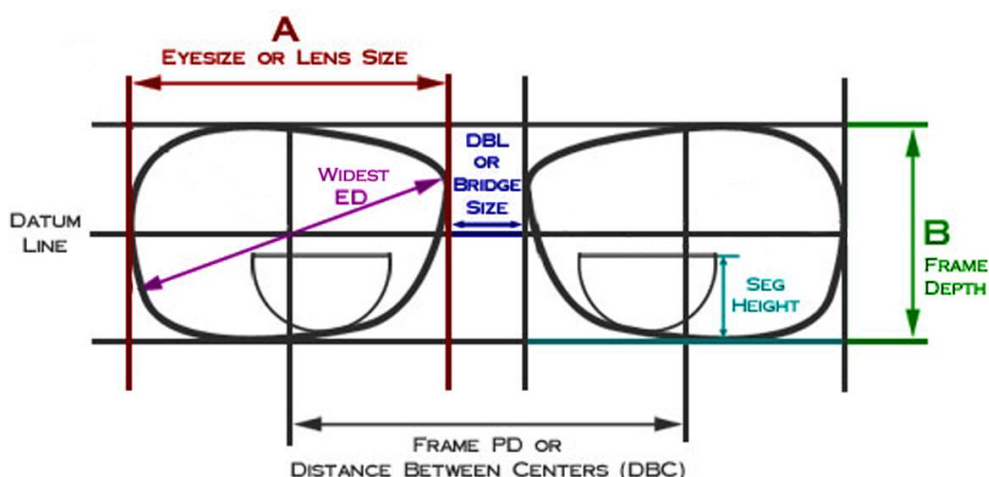


PROGRESSIVE AND FREE-FORM SINGLE VISION LENSES

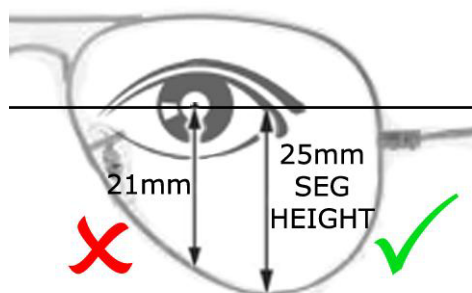

The correct height is 25mm. Measured from the Pupil Centre to the bottom of the Frame Box.

BIFOCAL LENSES

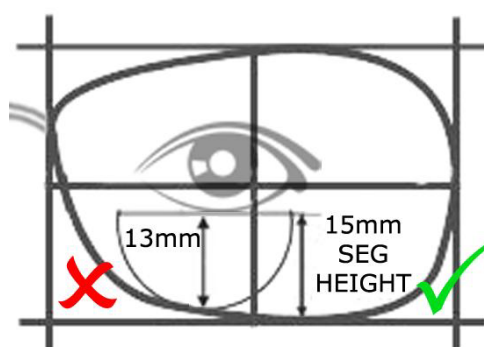

The correct height is 15mm. Measured from the Lid Margin to the bottom of the Frame Box.

July 2014